

CONSOLE FEATURES

LCD DIGITAL READOUT - 4-digit read-out of all functions. When "CAL" appears in the display, it indicates that the system needs to be calibrated.

Run LED - Illuminates when Pump is running.

FLOW CONTROL KEYS (Dual Function) - Manually increase or decrease flow rate when console is in manual mode. Also increases or decreases simulated speed when "SPEED" key is active.

WIDTH CAL KEY, METER CAL KEY, FLOW RATE KEY, SPEED KEY - Used to enter calibration numbers into console to calibrate the system.


SPEED CAL KEY - Used to calibrate speed sensor.

CropStart II
CONTROL SYSTEM

RUN
HOLD
OFF



RUN

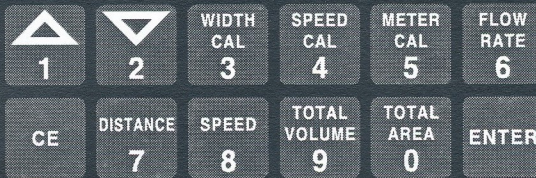

RAVEN
INDUSTRIES

RUN/HOLD/OFF - Place switch in RUN position when applying product. Place switch in HOLD position when shutting the system off (i.e., on end rows).

To turn off all power to the console, place switch in OFF position. Turning console OFF does not affect data stored in the computer.

ENTER - Used only to enter data into the computer.

TOTAL AREA KEY - Accumulates in acres.

FUNCTION KEYS - Used to display data. TOTAL VOLUME - Total Vol. applied.

DISTANCE KEY - Accumulates in feet.

CE - Use like the CE key on a calculator.